



Illustrated Parts List

Model Series

122400

TYPE NUMBERS
0110 through 0132.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	6
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Gear Reduction	6
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

122400









1019 LABEL KIT

1058 OWNER'S MANUAL





1330 REPAIR MANUAL





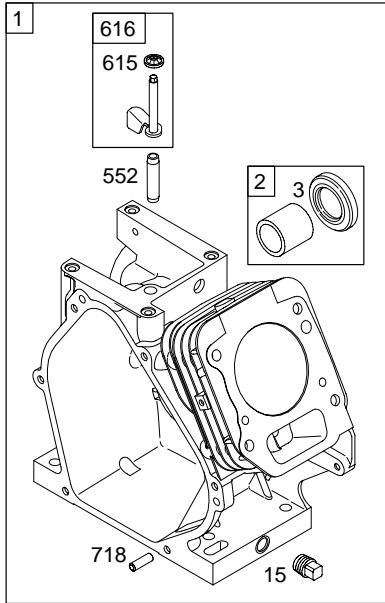



15A

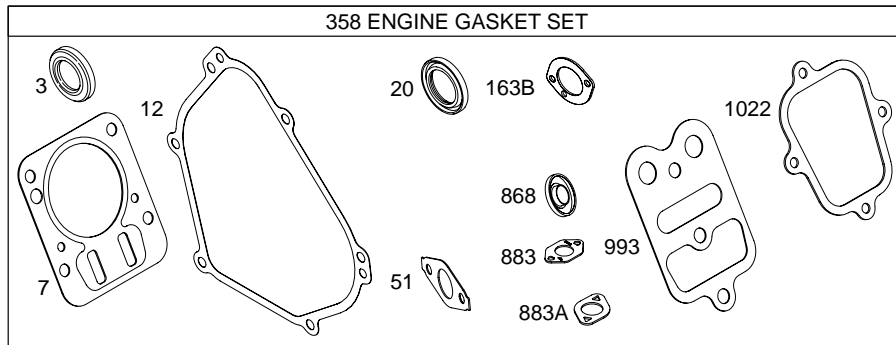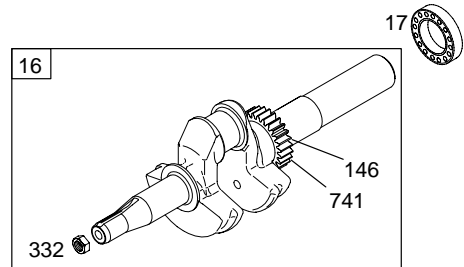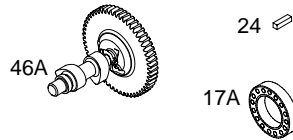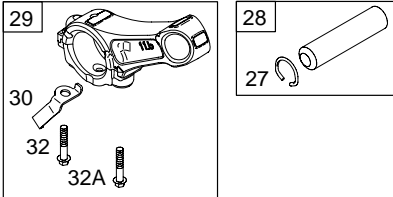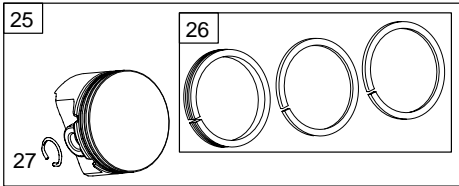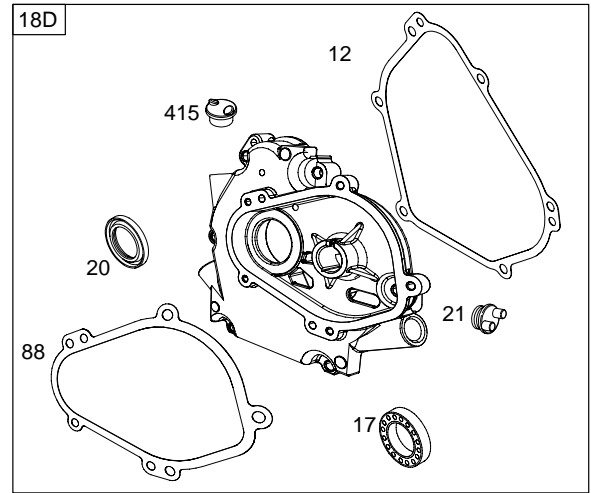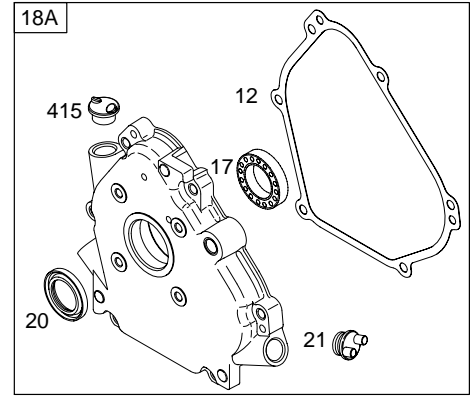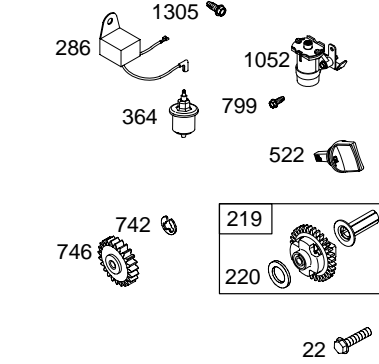







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3379-2 Assemblies include all parts shown in frames. 08/16/2005

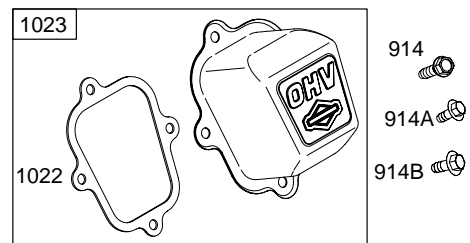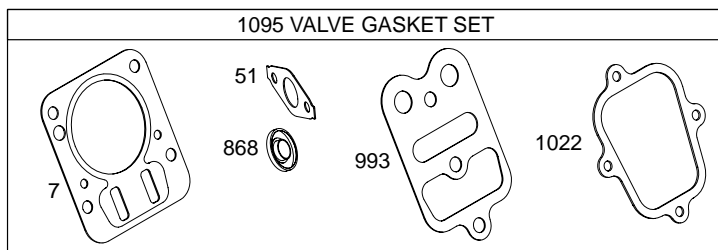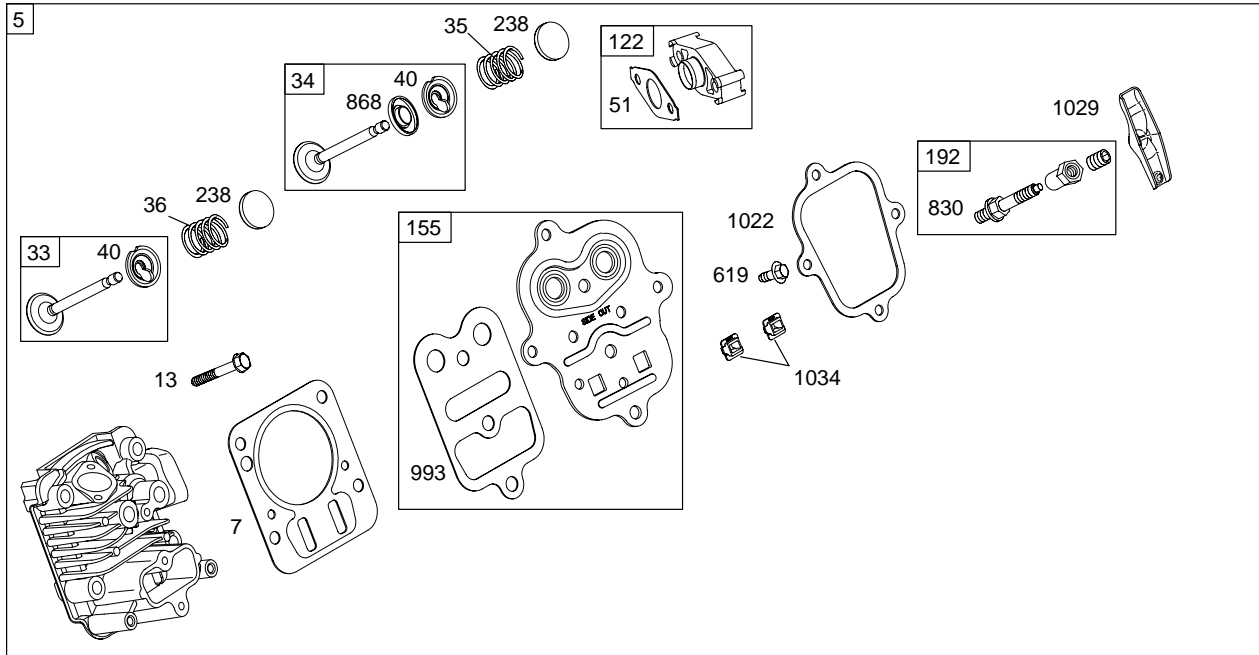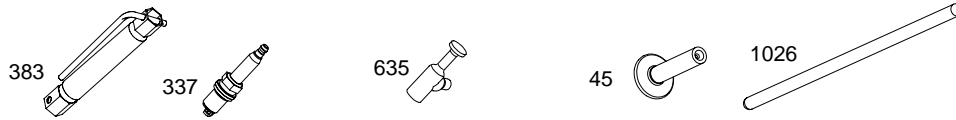

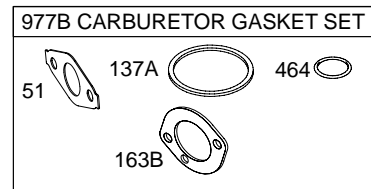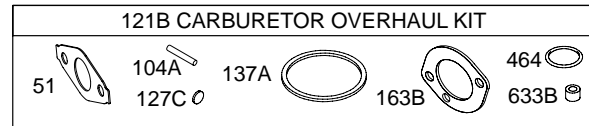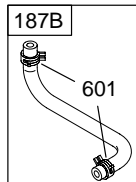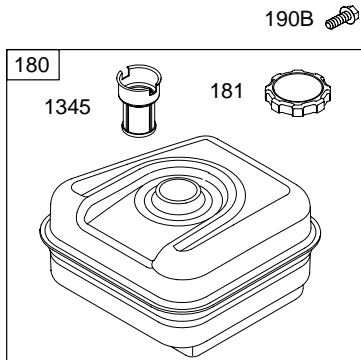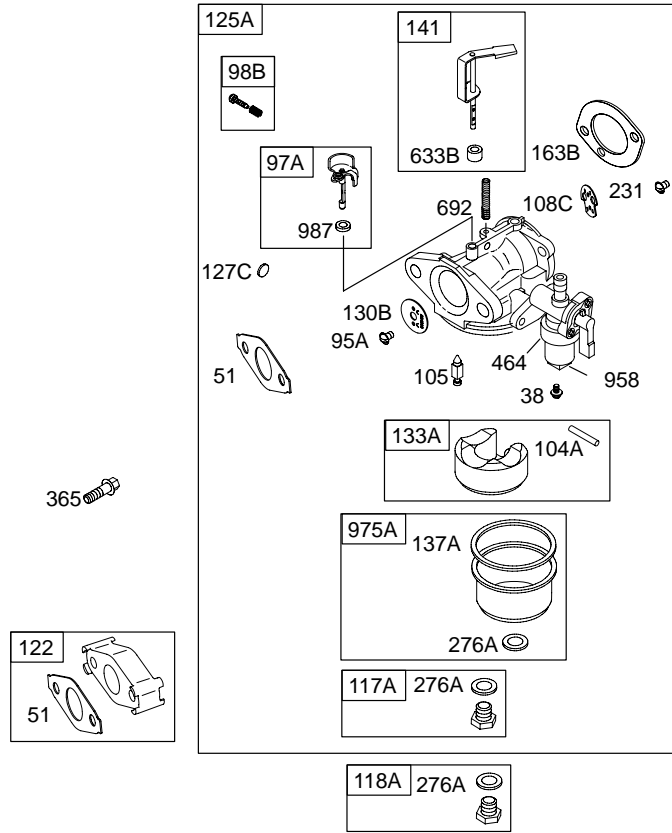

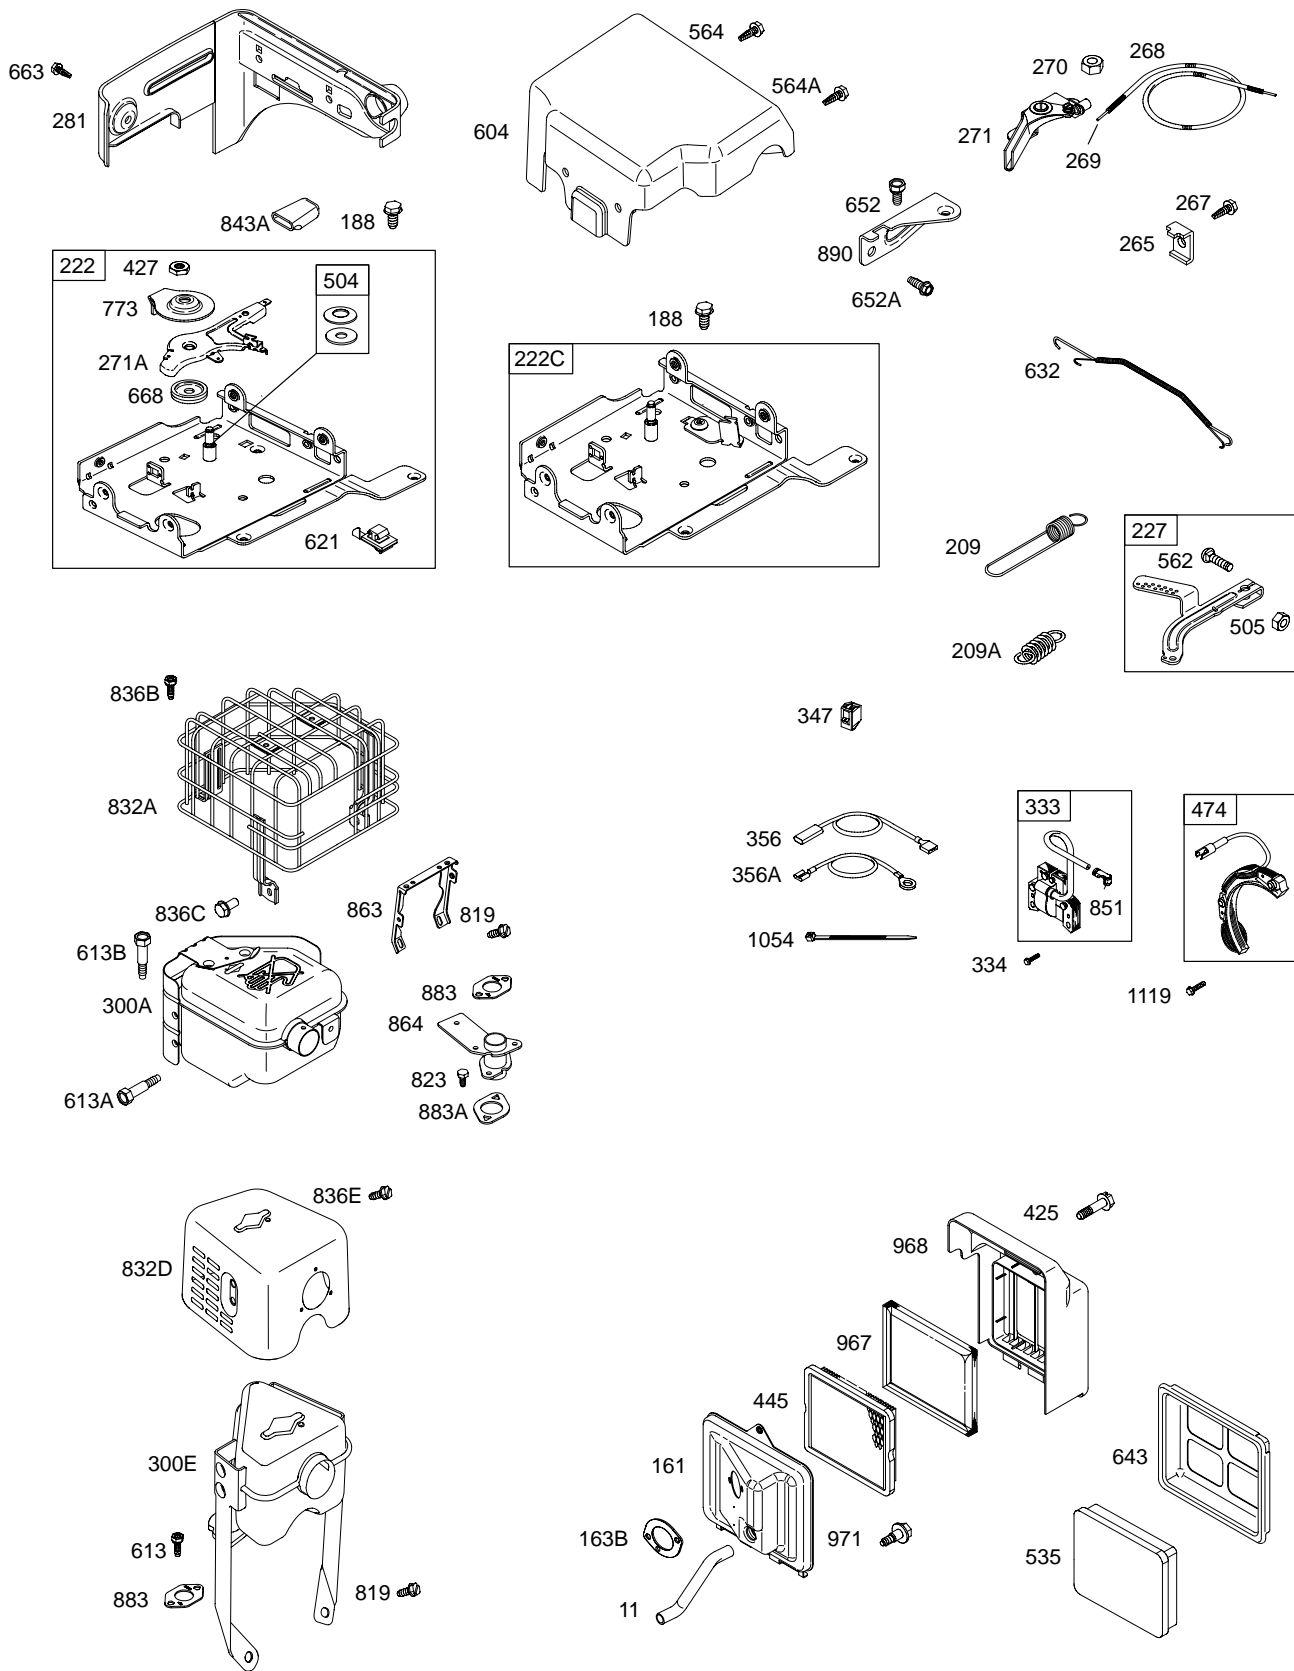

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3379-5 Assemblies include all parts shown in frames. 08/16/2005

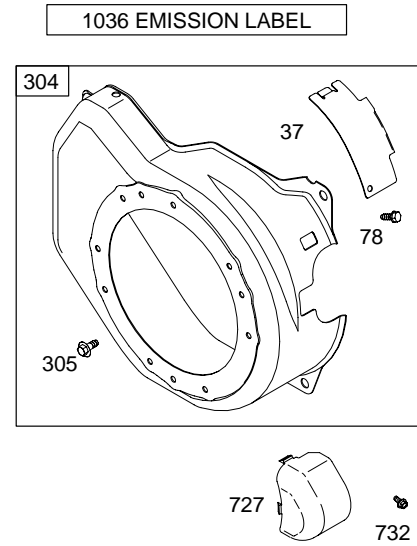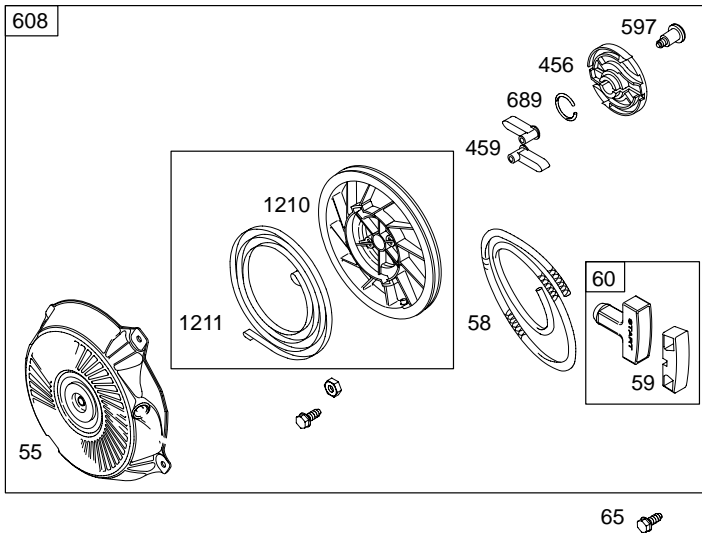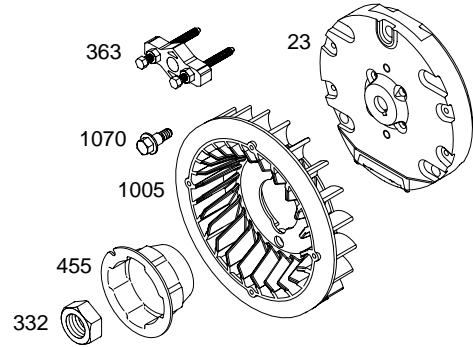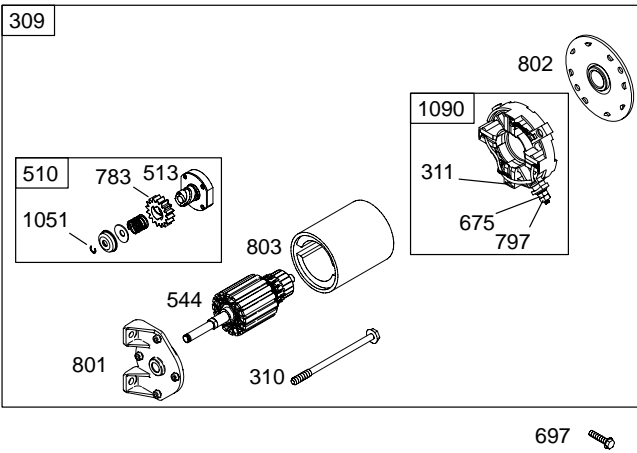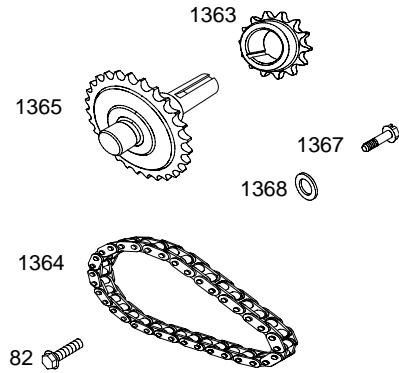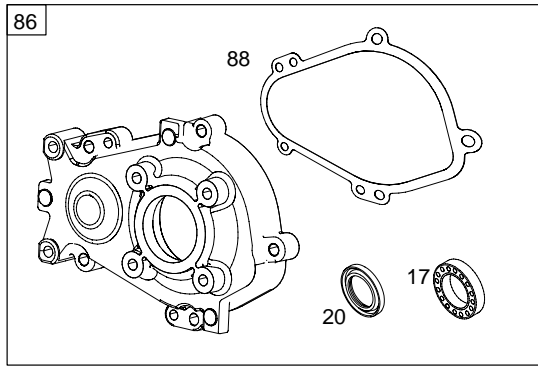

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly	18A	790337	Cover-Crankcase Used on Type No(s). 0110, 0112, 0113, 0114, 0115, 0118, 0119, 0122, 0123, 0124, 0125, 0127, 0128, 0129.	32	691664	Screw (Connecting Rod)
2	399269	Kit-Bushing/Seal (Magneto Side)				32A	695759	Screw (Connecting Rod)
3	★299819	Seal-Oil (Magneto Side)				33	499642	Valve-Exhaust
5	699486	Head-Cylinder				34	499641	Valve-Intake
7	★∅698210	Gasket-Cylinder Head	18D	790330	Cover-Crankcase Used on Type No(s). 0111, 0121, 0126, 0130.	35	691304	Spring-Valve (Intake)
11	812208	Tube-Breather (Flat Panel Air Cleaner)				36	691304	Spring-Valve (Exhaust)
12	★699485	Gasket-Crankcase	20	★692550	Seal-Oil (PTO Side)	37	699661	Guard-Flywheel
13	699482	Screw (Cylinder Head)	21	281658	Cap-Oil Fill	38	698557	Screw (Shut Off Valve)
15	691686	Plug-Oil Drain (Square Head)	22	699478	Screw (Crankcase Cover/ Sump)	40	692194	Retainer-Valve
15A	691682	Plug-Oil Drain (Flush)	23	699488	Flywheel ————— Note ————— 699514 Flywheel Used on Type No(s). 0121.	45	690977	Tappet-Valve
16	699835	Crankshaft Used on Type No(s). 0112, 0115. ————— Note ————— 699443 Crankshaft Used on Type No(s). 0113, 0114, 0124, 0125. 790329 Crankshaft Used on Type No(s). 0111, 0121, 0126, 0130. 698879 Crankshaft Used on Type No(s). 0110, 0118, 0119, 0122, 0123, 0127, 0128, 0129, 0132. 699452 Crankshaft Used on Type No(s). 0120.	24	222698	Key-Flywheel	46A	696813	Camshaft
			25	499627	Piston Assembly (Standard) ————— Note ————— 692789 Piston Assembly (.020" Oversize)	51★◆∅692555		Gasket-Intake
			26	499631	Ring Set (Standard) ————— Note ————— 692786 Ring Set (.020" Oversize)	55	798148	Housing-Rewind Starter
			27	691866	Lock-Piston Pin	58	66574	Rope-Starter (Cut to Required Length)
			28	499423	Pin-Piston	59	490653	Grip-Insert
			29	690124	Rod-Connecting	60	490652	Grip-Starter Rope
			30	791584	Dipper-Connecting Rod	65	699228	Screw (Rewind Starter)
17	692517	Bearing-Ball				78	699205	Screw (Flywheel Guard)
17A	690824	Bearing-Ball				82	807421	Screw (Gear Reduction Case)
						86	790332	Cover-Gear
						88	790333	Gasket-Gear Reduction Cover
						95A	698544	Screw (Throttle Valve)
						97A	698542	Shaft-Throttle
						98B	698551	Kit-Idle Speed
						104A	◆698536	Pin-Float Hinge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
105	698537	Valve-Float Needle	188	699479	Screw (Control Bracket)	286	698611	Module-Oil Sensor
108C	698546	Valve-Choke				300A	699231	Muffler
117A	698666	Jet-Main (Standard)	190B	699839	Screw (Fuel Tank)	300E	791595	Muffler
118A	698552	Jet-Main (High Altitude)	192	694543	Adjuster-Rocker Arm	304	699598	Housing-Blower
121B	698567	Kit-Carburetor Overhaul	209	692571	Spring-Governor Note 693206 Spring-Governor	305	699480	Screw (Blower Housing)
122	★693749	Spacer-Carburetor				306	693610	Shield-Cylinder
125A	698558	Carburetor				307	699483	Screw (Cylinder Shield)
127C	●690727	Plug-Welch				309	694504	Motor-Starter
130B	698543	Valve-Throttle				310	690323	Screw (Starter Motor)
133A	698539	Float-Carburetor	209A	691278	Spring-Governor	311	497608	Brush Set
137A	●698538	Gasket-Float Bowl	219	693578	Gear-Governor	332	699359	Nut (Flywheel)
141	698545	Kit-Choke Shaft	220	691724	Washer (Governor Gear)	333	695711	Armature-Magneto
146	690979	Key-Timing Note 790943 Key-Timing Used on Type No(s). 0111, 0121, 0126, 0130.	222	699589	Bracket-Control	334	699477	Screw (Magneto Armature)
			222C	699493	Bracket-Control			
			227	692573	Lever-Governor Control	337	491055	Plug-Spark (Resistor) Note 691043 Plug-Spark (EMS)
			231	690718	Screw (Choke Valve)			
155	★698214	Plate-Cylinder Head	238	691300	Valve-Cap	347	698338	Switch-Rocker Note 697854 Switch-Rocker Used on Type No(s). 0110, 0112, 0114, 0118, 0119, 0122, 0123, 0125.
161	699207	Base-Air Cleaner (Metal) (Flat Panel Air Cleaner)	265	691024	Clamp-Casing			
			267	699492	Screw (Casing Clamp)			
163B	★696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)	268	691025	Casing-Control Wire (72" Long) (Cut to Required Length)			
180	791598	Tank-Fuel (Metal)	269	691026	Wire-Control (78" Long) (Cut to Required Length)	356	692602	Wire-Stop
181	699840	Cap-Fuel Tank (Metal)				356A	695630	Wire-Stop
187B	791874	Line-Fuel (Molded) (Used After Code Date 05063000). Note 693401 Line-Fuel (Molded) (Used Before Code Date 05070100).	270	691027	Nut (Control Wire Casing)	358	699638	Gasket Set-Engine
			271	691028	Lever-Control	363	19069	Puller-Flywheel
			271A	694256	Lever-Control	364	695693	Terminal-Oil Plug
			276A	●698540	Washer-Sealing	365	699484	Screw (Carburetor)
			281	790261	Panel-Control Note 699639 Panel-Control Used on Type No(s). 0121.	383	19374	Wrench-Spark Plug
						415	693463	Plug
						425	699208	Screw (Air Cleaner Cover)
						427	694255	Nut (Control Bracket)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3379-8

Assemblies include all parts shown in frames.

08/16/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	491588	Filter–Air Cleaner Cartridge (Flat Panel)	619	699230	Screw (Cylinder Head Plate)	830	694544	Stud–Rocker Arm
455	692591	Cup–Flywheel	621	692310	Switch–Stop	832A	697818	Guard–Muffler
456	692299	Plate–Pawl Friction	632	693408	Spring/Link–Mechanical Governor	832D	791600	Guard–Muffler
459	281505	Pawl–Ratchet	633B	●690998	Seal–Choke/Throttle Shaft	836B	699209	Screw (Muffler Guard)
464	◆698550	Seal–O Ring (Fuel Shut Off Valve)	635	692927	Boot–Spark Plug	836C	699234	Screw (Muffler Guard)
474	695730	Alternator	643	696264	Retainer–Air Filter	836E	699491	Screw (Muffler Guard)
504	694254	Washer Set–Friction	652	699755	Screw (Support Bracket)	843A	695588	Sleeve–Lever
505	691251	Nut (Governor Control Lever)	652A	699230	Screw (Support Bracket)	851	493880	Terminal–Spark Plug
510	499308	Drive–Starter	663	699206	Screw (Control Panel)	863	699229	Bracket–Muffler
513	692024	Drive–Clutch	668	694257	Spacer	864	699232	Adapter–Muffler
522	697689	Plug–Dipstick/Fill	675	691261	Washer (Brush Retainer)	868	★∅692044	Seal–Valve
535	696263	Filter–Air Cleaner Foam	689	691855	Spring–Friction	883	★691893	Gasket–Exhaust
544	692966	Armature–Starter	692	690572	Spring–Detent	883A	★692237	Gasket–Exhaust
552	692346	Bushing–Governor Crank	697	790537	Screw (Starter Motor)	890	790203	Bracket–Control
562	691119	Bolt (Governor Control Lever)	718	690959	Pin–Locating	914	699481	Screw (Rocker Cover) (Bottom)
564	699491	Screw (Control Cover)	727	698039	Cover–Starter Drive	914A	692557	Screw (Rocker Cover) (Top)
564A	699206	Screw (Control Cover)	732	699200	Screw (Starter Drive Cover)	914B	697551	Screw (Rocker Cover) (Center)
597	691696	Screw (Pawl Friction Plate)	741	695087	Gear–Timing	958	698549	Valve–Fuel Shut Off (Plastic)
601	95162	Clamp–Hose	742	692564	Retainer–E Ring	967	493537	Filter–Pre Cleaner (Flat Panel)
604	697326	Cover–Control	746	692566	Gear–Idler	968	692584	Cover–Air Cleaner (Flat Panel)
608	791670	Starter–Rewind	773	694258	Retainer	————— Note —————		
613	699209	Screw (Muffler)	783	692353	Gear–Pinion	698811 Cover–Air Cleaner (Flat Panel) Used on Type No(s). 0118, 0119, 0132.		
613A	699230	Screw (Muffler)	797	691029	Nut (Brush Retainer)	971	690370	Screw (Air Cleaner Base To Carburetor)
613B	697812	Screw (Muffler)	799	699202	Screw (Oil Sensor)			
615	692576	Retainer–Governor Shaft	801	694482	Cap–Drive			
616	692547	Crank–Governor	802	691286	Cap–End			
			803	693757	Housing–Starter			
			819	699233	Screw (Muffler Bracket)			
			823	699209	Screw (Muffler Adapter)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
975A	698541	Bowl-Float	1052	790141	Sensor-Oil	1305	699691	Screw
977B	698568	Gasket Set-Carburetor	1054	280275	Cable-Tie			(Oil Sensor Module)
987	698556	Seal-Throttle Shaft	1058	276355	Owner's Manual	1330	272147	Repair Manual
993	Ø694088	Gasket-Cylinder Head Plate	1070	699201	Screw (Flywheel Fan)	1345	699887	Filter-Filler Neck
1005	692592	Fan-Flywheel	1090	691293	Retainer-Brush	1363	790334	Sprocket-Gear Reduction
1019	694852	Kit-Label	1095	698215	Gasket Set-Valve	1364	790335	Chain-Gear Reduction
1022	★Ø691890	Gasket-Rocker Cover	1119	699772	Screw (Alternator)	1365	790336	Shaft-Output Gear Reduction
1023	791585	Cover-Rocker Arm	1210	791849	Pulley/Spring Assembly (Pulley)	1367	690936	Screw (Gear Reduction Sprocket)
1026	790287	Rod-Push						
1029	691230	Arm-Rocker	1211	791849	Pulley/Spring Assembly (Spring)	1368	690301	Washer (Gear Reduction Sprocket)
1034	691343	Guide-Push Rod						
1036	791856	Label-Emission						
1051	691265	Ring-Retaining						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.