

Illustrated Parts List

Model Series

19N100

TYPE NUMBERS
0001 through 0222.

TABLE OF CONTENTS

Alternator	8
Air Cleaner	4
Armature	8
Blower Housing	7
Camshaft	2
Carburetor	5
Controls	9
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	8
Exhaust Bracket	2
Exhaust System	6
Flywheel	7
Fuel Supply	6
Gasket Sets	3
Governor Spring	9
Ignition	8
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	7
Spark Plug	8
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

19N100

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

227
505 582
28
29
614
616

1058 OPERATOR'S MANUAL

1036 EMISSIONS LABEL

18A

522A
842A
17
20
718A

25

27 28

16 17 24
357
46

1

718A
729
3
718
15
631

509
492
12A

306
307
847
287

18B

22A
20
12A
718A
522
842





18C

20
12A
718A
522
842

22


22 22A

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.


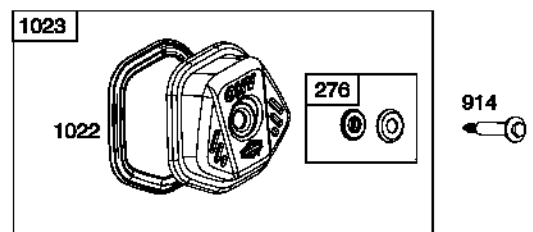 
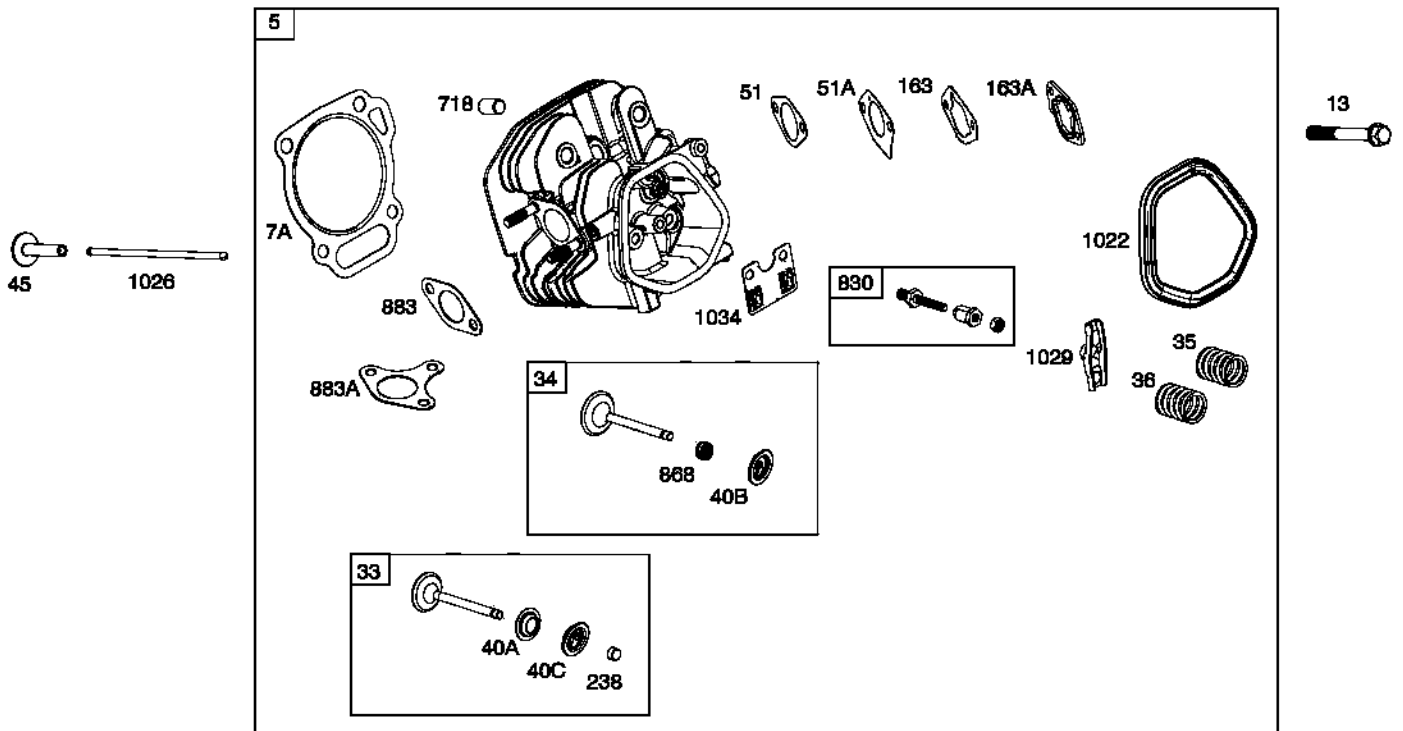 
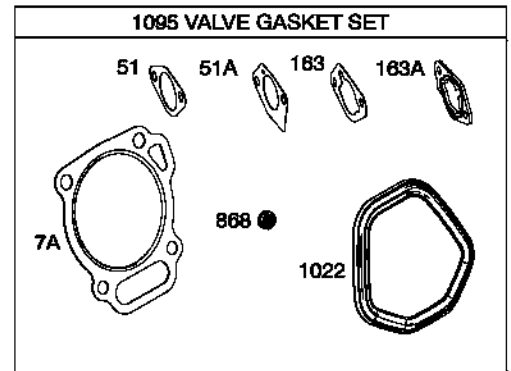 
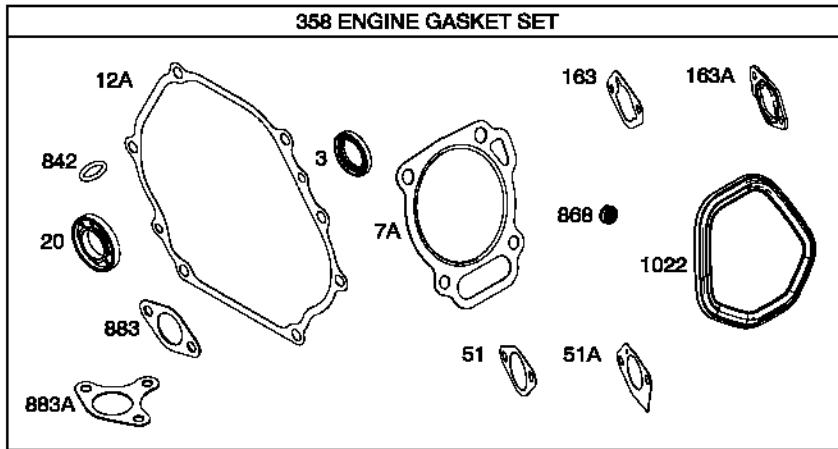 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

 19N100













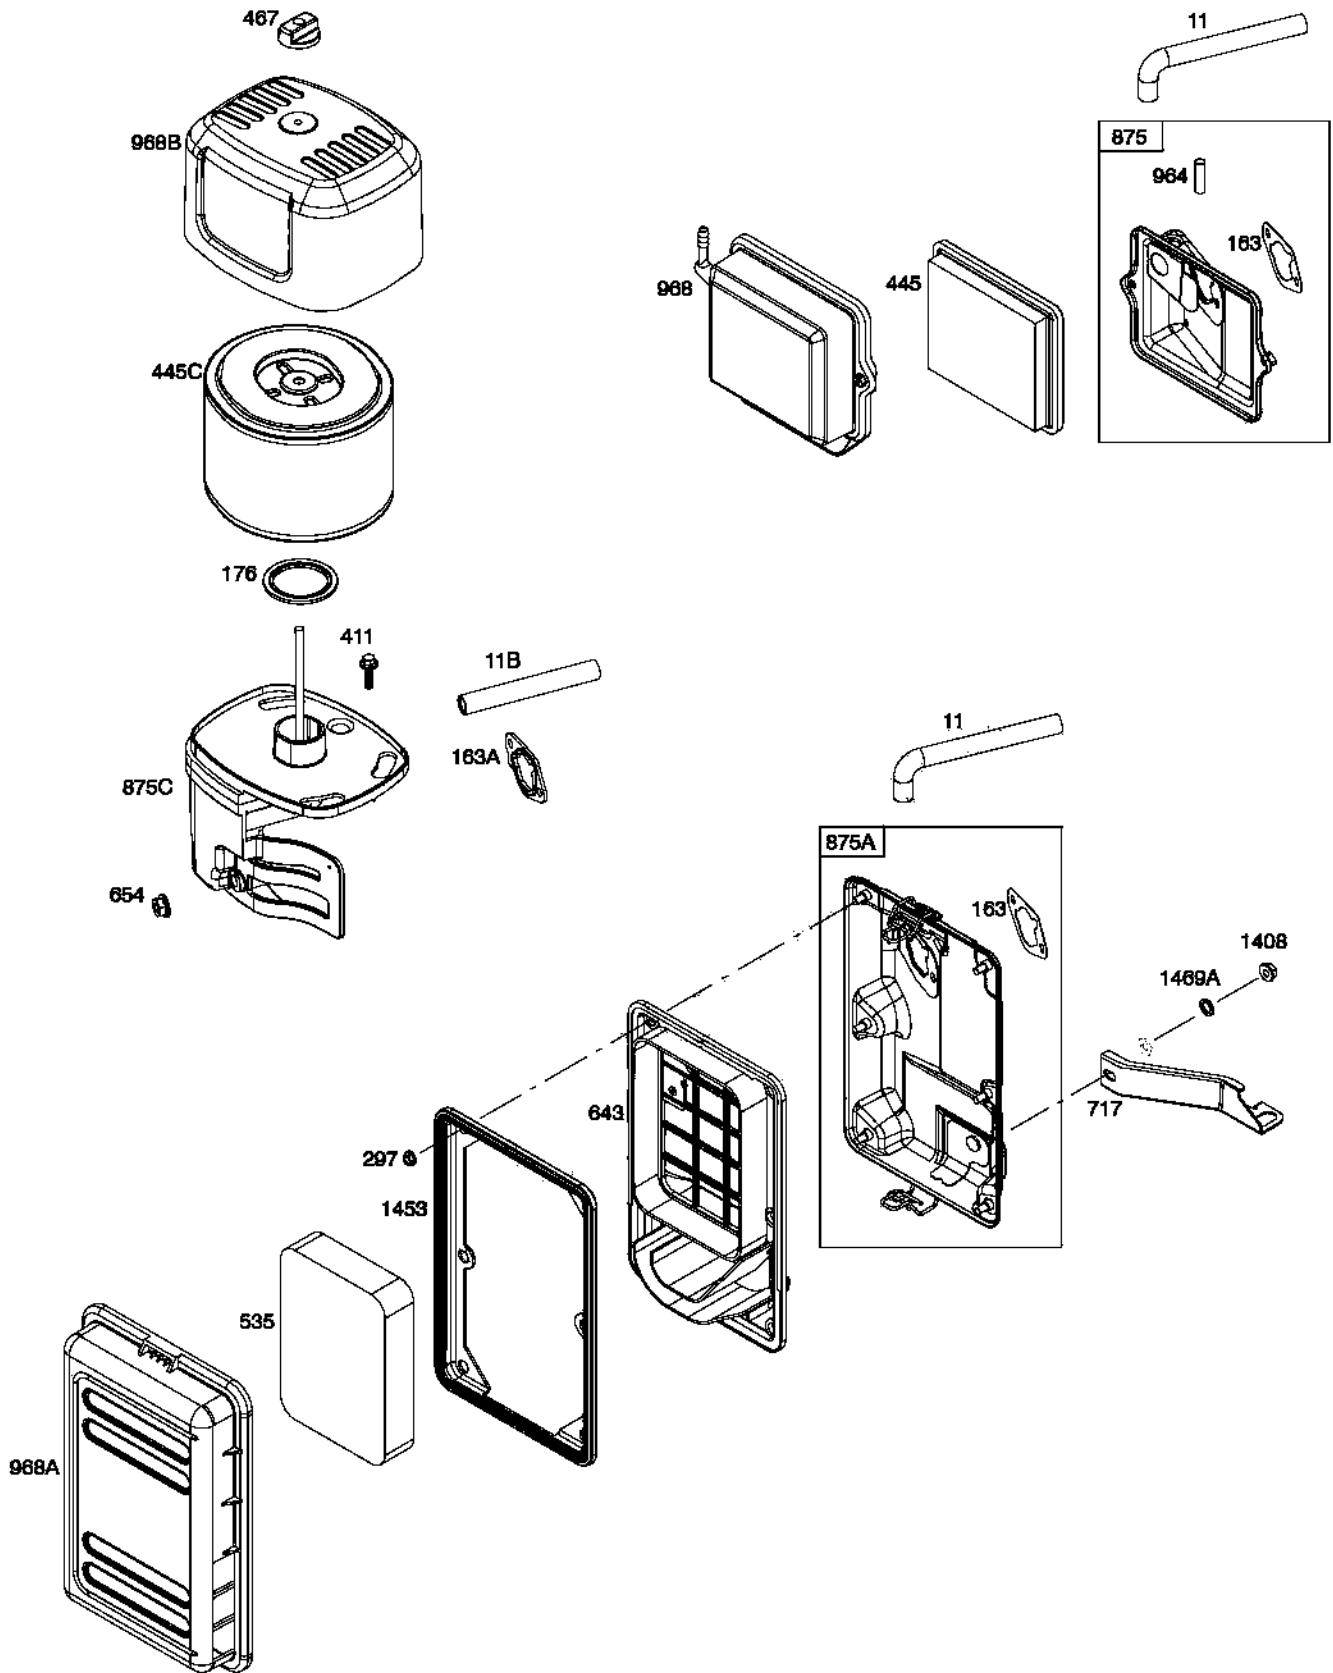


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

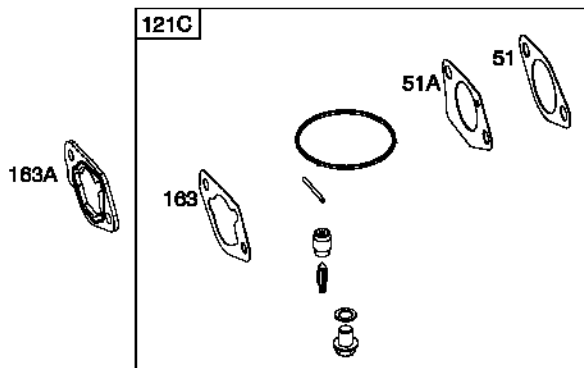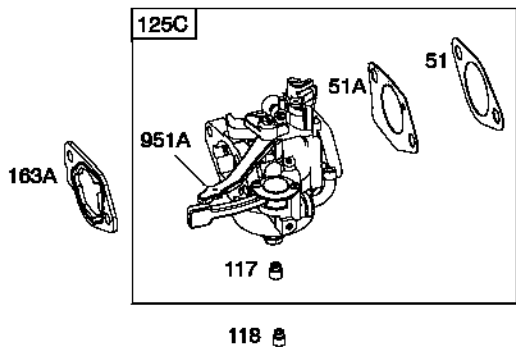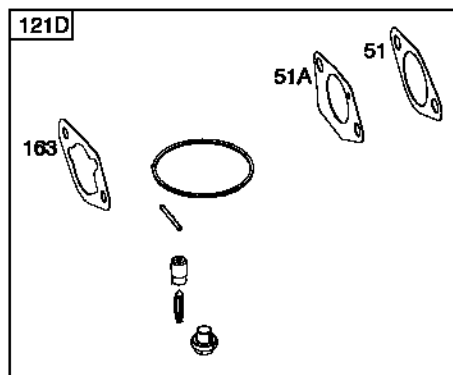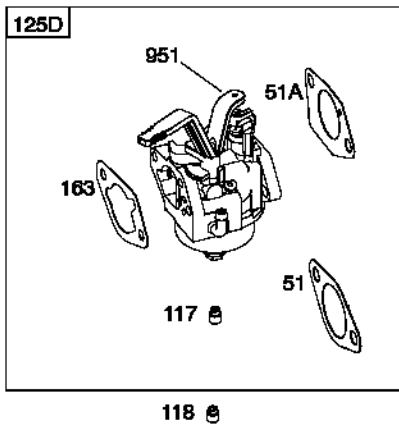    
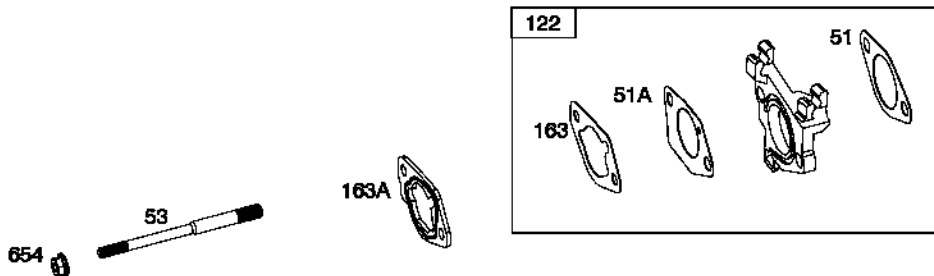 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

             19N100

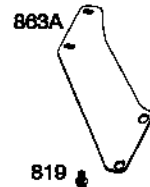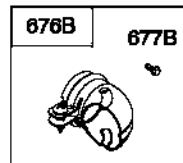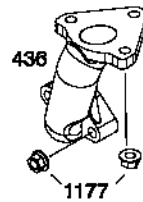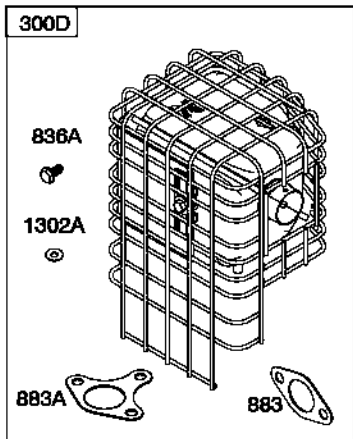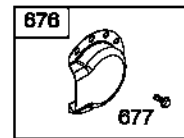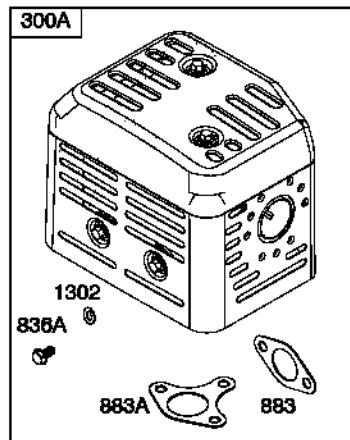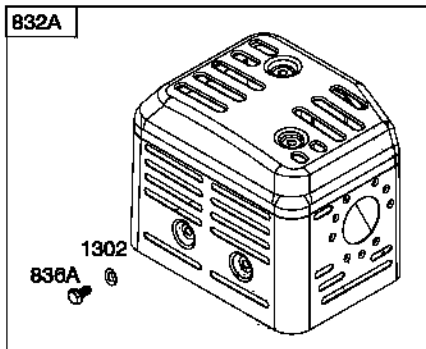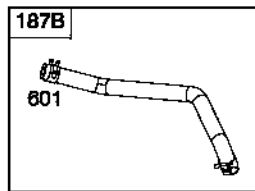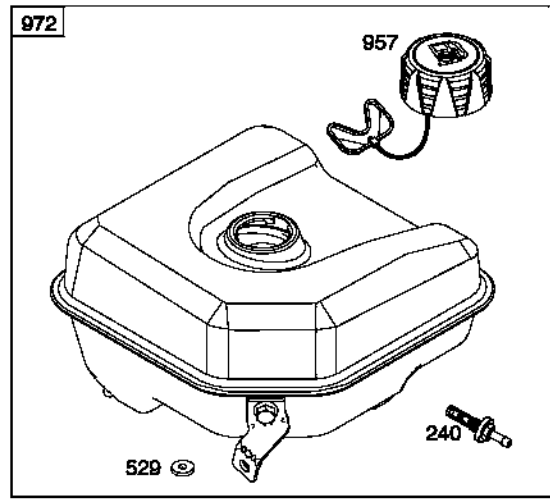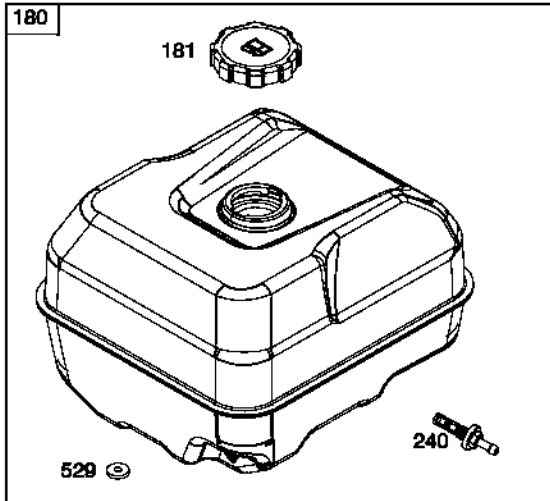


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

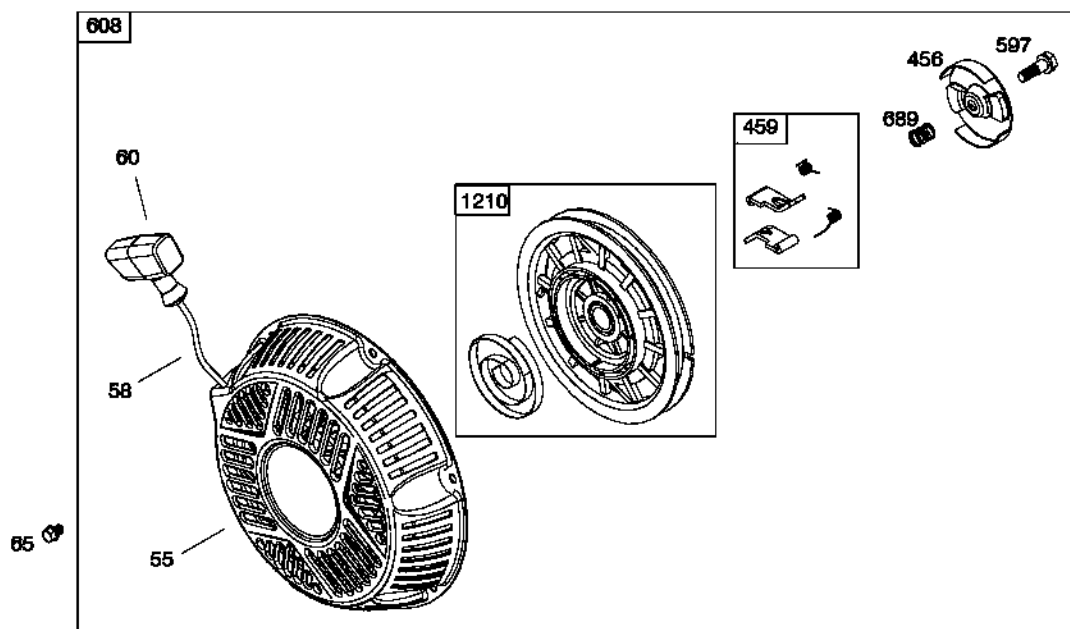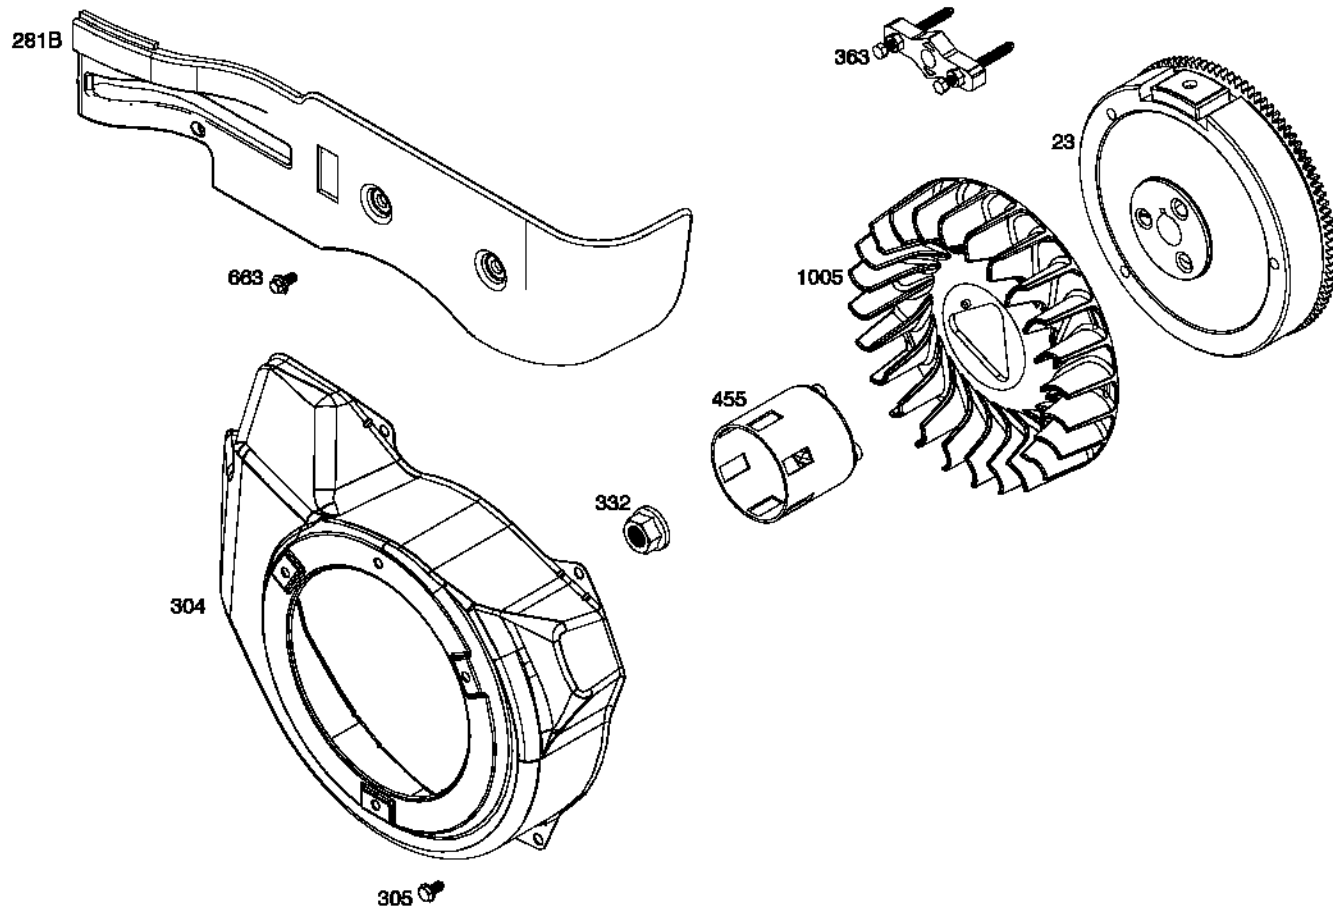  


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

 
19N100

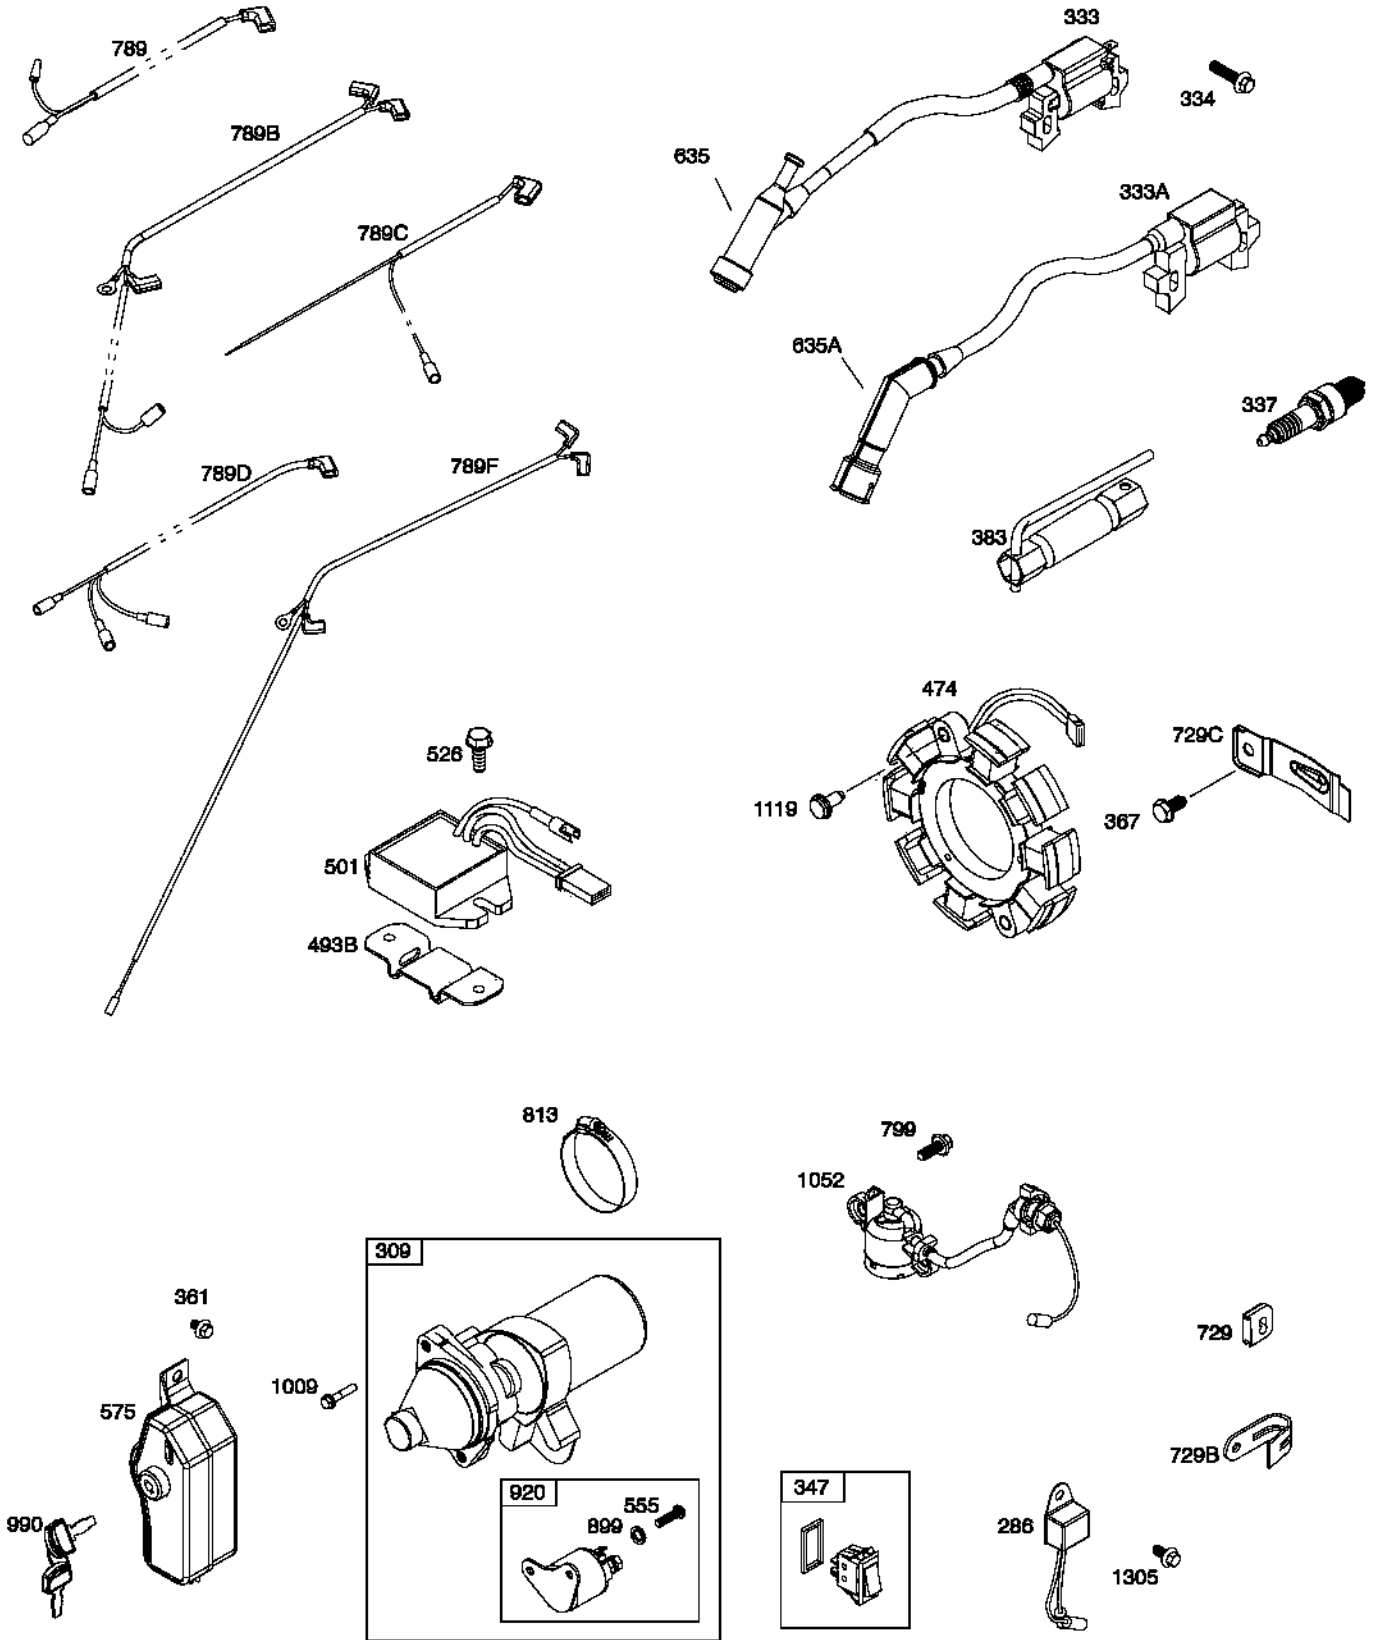


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

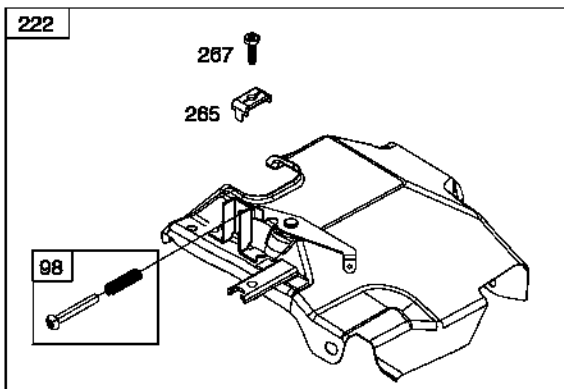 

188

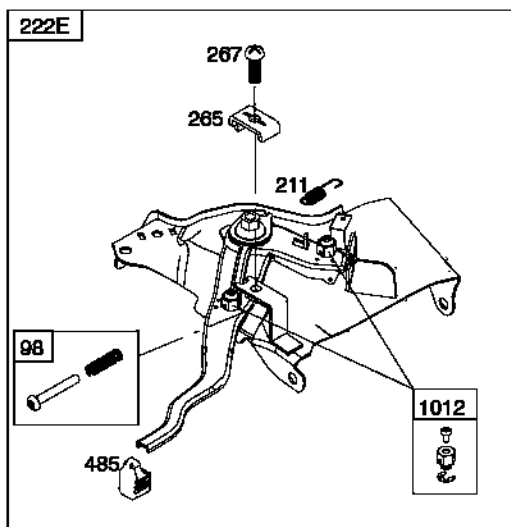 


188

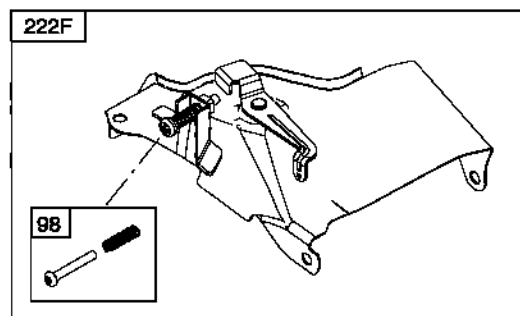 

188

 621

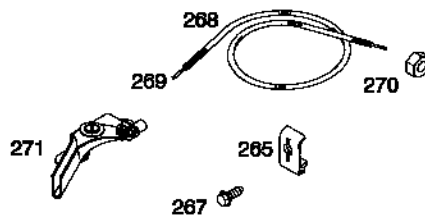

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	593106	Cylinder Assembly ----- Note ----- 593140 Cylinder Assembly Used on Type No(s). 0009, 0027, 0030, 0036, 0042, 0049, 0052, 0058. 593726 Cylinder Assembly Used on Type No(s). 0020, 0021, 0034, 0048, 0051, 0221. 593736 Cylinder Assembly Used on Type No(s). 0053.	16	593084	Crankshaft ----- Note ----- 591835 Crankshaft Used on Type No(s). 0006, 0009, 0027, 0028, 0036, 0045, 0049. 591836 Crankshaft Used on Type No(s). 0013, 0014, 0015. 593115 Crankshaft Used on Type No(s). 0003, 0021, 0022, 0033, 0034, 0058, 0064, 0221, 0222. 593135 Crankshaft Used on Type No(s). 0008. 593662 Crankshaft Used on Type No(s). 0051, 0053. 593691 Crankshaft Used on Type No(s). 0055.	23	593100	Flywheel ----- Note ----- 593139 Flywheel Used on Type No(s). 0009, 0027, 0030, 0036, 0052, 0053, 0058. 593735 Flywheel Used on Type No(s). 0042, 0049.
3	591794	Seal-Oil (Magneto Side)	17	591792	Bearing-Ball (Crankshaft)	24	797812	Key-Flywheel
5	593093	Head-Cylinder ----- Note ----- 593132 Head-Cylinder Used on Type No(s). 0006, 0013, 0014, 0015, 0045.	18A	592038	Cover-Crankcase Used on Type No(s). 0013, 0014, 0015.	25	592613	Piston Assembly (Standard) ----- Note ----- 593108 Piston Assembly (.010" Oversize) 593109 Piston Assembly (.020" Oversize)
7A	592834	Gasket-Cylinder Head	18B	593083	Cover-Crankcase ----- Note ----- 593114 Cover-Crankcase Used on Type No(s). 0003, 0021, 0022, 0034, 0058, 0064, 0221, 0222.	26	592614	Ring Set (Standard) ----- Note ----- 593110 Ring Set (.010" Oversize) 593111 Ring Set (.020" Oversize)
11	592353	Tube-Breather	18C	593661	Cover-Crankcase Used on Type No(s). 0019, 0035, 0039, 0051, 0052, 0053, 0055. ----- Note ----- 593747 Cover-Crankcase Used on Type No(s). 0033.	27	592044	Lock-Piston Pin
11B	799832	Tube-Breather (Cut To Required Length)	20	591793	Seal-Oil (PTO Side)	28	592045	Pin-Piston
12A	592597	Gasket-Crankcase	22	797776	Screw (Crankcase Cover/Sump)	29	592046	Rod-Connecting
13	797791	Screw (Cylinder Head)	22A	593107	Screw (Crankcase Cover/Sump)	33	592612	Valve-Exhaust
15	797793	Plug-Oil Drain				34	592611	Valve-Intake
						35	591814	Spring-Valve (Intake)
						36	591814	Spring-Valve (Exhaust)
						40A	797782	Retainer-Valve
						40B	591815	Retainer-Valve
						40C	591816	Retainer-Valve
						45	797786	Tappet-Valve
						46	592617	Camshaft
						51	591779	Gasket-Intake
						51A	591798	Gasket-Intake
						53	590390	Stud (Carburetor) ----- Note ----- 591801 Stud (Carburetor) Used on Type No(s). 0006, 0013, 0014, 0015, 0045.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10450-10 Assemblies include all parts shown in frames. 03/13/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	591787	Housing-Rewind Starter	163	797756	Gasket-Air Cleaner	271	691028	Lever-Control
58	691921	Rope-Starter (Cut to Required Length)	163A	799883	Gasket-Air Cleaner	276	797847	Washer-Sealing (Rocker Cover)
60	691915	Grip-Starter Rope	176	799834	Seal-O Ring (Air Cleaner Base)	----- Note -----		
65	797654	Screw (Rewind Starter)	180	593095	Tank-Fuel	590987	Washer-Sealing (Rocker Cover)	
98	593104	Kit-Idle Speed	181	794641	Cap-Fuel Tank	Used on Type No(s).		
		----- Note -----	187B	593092	Line-Fuel	0002, 0003, 0004,		
		592978 Kit-Idle Speed	----- Note -----			0006, 0018, 0020,		
		Used on Type No(s).	592072 Line-Fuel	Used on Type No(s).				
		0006, 0009, 0013,	593721 Line-Fuel	0045.				
		0014, 0015, 0027,	Used on Type No(s).	0019, 0033, 0034,				
		0028, 0036, 0045,	0035, 0039, 0051,	0052, 0053, 0055.				
		0049.	188	798618	Screw (Control Bracket)	281B	593099	Panel-Control
117	592598	Jet-Main (Standard)	190	590964	Screw (Fuel Tank)	----- Note -----		
		----- Note -----	202	591834	Link-Mechanical Governor	593314	Panel-Control	
		592928 Jet-Main (Standard)	209	591786	Spring-Governor	Used on Type No(s).		
		Used on Type No(s).	211	799927	Spring-Governed Idle	0009, 0027, 0028,		
		0006.	222	591810	Bracket-Control	0036, 0049.		
		593503 Jet-Main (Standard)	222E	593105	Bracket-Control	593732	Panel-Control	
		Used on Type No(s).	222F	593315	Bracket-Control	Used on Type No(s).		
		0013, 0014, 0015,	Used on Type No(s).			0030, 0034, 0042,		
		0045.	227	592616	Lever-Governor Control	0052, 0053.		
118		Jet-Main (High Altitude) (Not Yet Available)	232	797809	Spring-Governor Link	286	797772	Module-Oil Sensor
121C	592229	Kit-Carburetor Overhaul	238	591817	Cap-Valve	287	798618	Screw (Dipstick Tube)
121D	593133	Kit-Carburetor Overhaul	240	797346	Filter-Fuel	297	591808	Nut (Air Filter Retainer)
122	591797	Spacer-Carburetor	240A	394358a	Filter-Fuel	300A	593090	Muffler
125C	592594	Carburetor	265	691024	Clamp-Casing (Casing Clamp)	300D	593128	Muffler
		----- Note -----	267	699492	Screw (Casing Control)	----- Note -----		
		593745 Carburetor	268	691025	Casing-Control Wire (Cut To Required Length)	593731	Muffler	
		Used on Type No(s).	269	691026	Wire-Control (Cut To Required Length)	Used on Type No(s).		
		0048, 0218, 0221,	270	691027	Nut (Control Wire Casing)	0034.		
		0222.				304	591785	Housing-Blower
125D	592596	Carburetor				305	798618	Screw (Blower Housing)
		----- Note -----				306	591790	Shield-Cylinder
		592595 Carburetor				307	798618	Screw (Cylinder Shield)
		Used on Type No(s).				309	591780	Motor-Starter
		0013, 0014, 0015,				332	797811	Nut (Flywheel)
		0045.				333	797769	Armature-Magneto

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10450-11 **Assemblies include all parts shown in frames.** 03/13/2014

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
357	590960	Key-Drive Pulley ----- Note ----- 591054 Key-Drive Pulley Used on Type No(s). 0003, 0021, 0022, 0033, 0058, 0064, 0221, 0222.	601	791850	Clamp-Hose	847	593174	Dipstick/Tube Assembly
358	593112	Gasket Set-Engine	608	591781	Starter-Rewind	863A	593733	Bracket-Muffler
361	798618	Screw (Starting Switch)	614	797229	Pin-Cotter	868	797854	Seal-Valve (Intake)
363	19203	Puller-Flywheel	616	592615	Crank-Governor	875	799776	Base-Air Cleaner (Plastic)
367	798618	Screw (Wire Clip)	621	692310	Switch-Stop	875A	591804	Base-Air Cleaner (Plastic)
383	19576S	Wrench-Spark Plug	631	797794	Washer (Oil Drain Plug)	875C	593088	Base-Air Cleaner (Plastic)
411	797686	Screw (Air Cleaner Base to Carburetor)	635	797658	Boot-Spark Plug	883	797770	Gasket-Exhaust
436	593089	Manifold-Exhaust	635A	797685	Boot-Spark Plug	883A	799797	Gasket-Exhaust
445	491588s	Filter-Air Cleaner Cartridge	643	591806	Retainer-Air Filter	899	799642	Washer (Starter Solenoid)
445C	592605	Filter-Air Cleaner Cartridge	654	690939	Nut (Carburetor)	914	797848	Screw (Rocker Cover) ----- Note ----- 590988 Screw (Rocker Cover) Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0048, 0058, 0218, 0221, 0222.
455	591820	Cup-Flywheel	663	799846	Screw (Control Panel)	920	799481	Solenoid-Starter
456	799973	Plate-Pawl Friction	676	590953	Deflector-Muffler	951	592068	Lever-Choke Used on Type No(s). 0006. ----- Note ----- 797759 Lever-Choke Used on Type No(s). 0013, 0014, 0015, 0045.
459	799976	Pawl-Ratchet	676B	697816	Deflector-Muffler	951A	593102	Lever-Choke
467	691985	Knob-Air Cleaner	677	699203	Screw (Muffler Deflector)	957	799324	Cap-Fuel Tank
474	591100	Alternator	677B	699776	Screw (Muffler Deflector)	964	799159	Cap-Connector
485	797339	Knob-Control	689	799669	Spring-Friction	968	590958	Cover-Air Cleaner Used on Type No(s). 0013, 0014. ----- Note ----- 791082 Cover-Air Cleaner Used on Type No(s). 0013, 0014, 0015, 0045.
492	592037	Shield-Crankcase	703	590967	Clip (Fuel Hose)			
493B	691177	Bracket-Mounting	705	590965	Nut (Fuel Tank)			
501	845907	Regulator	717	593134	Bracket-Air Cleaner			
505	690939	Nut (Governor Control Lever)	718	797792	Pin-Locating (Cylinder Head)			
509	798840	Screw (Crankcase Shield)	718A	797761	Pin-Locating (Crankcase Cover)			
522	799941	Plug-Dipstick/Fill	729	797750	Clip-Wire			
522A	797762	Plug-Dipstick/Fill	729B	592311	Clip-Wire			
526	690297	Screw (Regulator)	729C	593137	Clip-Wire			
529	799933	Grommet (Fuel Tank)	789	797856	Harness-Wiring			
535	591778	Filter-Air Cleaner Foam	789B	593082	Harness-Wiring			
555	799532	Screw (Starter Solenoid)	789C	590371	Harness-Wiring			
562	797230	Bolt (Governor-Control Lever)	789D	590372	Harness-Wiring			
575	593734	Switch-Starting	789F	593722	Harness-Wiring			
597	799972	Screw (Pawl Friction Plate)	799	798975	Screw (Oil Sensor)			
			813	590392	Clamp			
			819	798618	Screw (Muffler Bracket)			
			830	591088	Stud-Rocker Arm			
			832A	593091	Guard-Muffler			
			836A	798976	Screw (Muffler Guard)			
			842	797327	Seal-O Ring (Dipstick Tube)			
			842A	797763	Seal-O Ring (Dipstick Tube)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10450-12 Assemblies include all parts shown in frames. 03/13/2014

19N100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
968A	591803	Cover-Air Cleaner	1026	591818	Rod-Push	1177	590965	Nut (Muffler)
968B	593087	Cover-Air Cleaner	1029	591087	Arm-Rocker	1210	591788	Pulley/Spring Assembly (Pulley)
972	593720	Tank-Fuel	1034	591819	Guide-Push Rod Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)	1302	590457	Washer (Muffler Guard)
990	590996	Key Set	1036			1302A	593727	Washer (Muffler Guard)
994	790153	Arrestor-Spark	1052	797771	Sensor-Oil	1305	798618	Screw (Oil Sensor Module)
1005	591789	Fan-Flywheel	1058	279127TRI	Manual-Operator's	1319	794467	Label-Warning
1009	593136	Screw (Starter Motor)			----- Note ----- 279127WST Manual-Operator's	1319A	797669	Label-Warning
1012	590378	Retainer-Link			279127EST Manual-Operator's	1345	792917	Filter-Filler Neck
1022	797846	Gasket-Rocker Cover			279127ZH Manual-Operator's	1408	690939	Nut (Air Cleaner Bracket)
1023	799778	Cover-Rocker Arm ----- Note ----- 590989 Cover- Rocker Arm Used on Type No(s). 0002, 0003, 0004, 0006, 0018, 0020, 0021, 0022, 0048, 0058, 0218, 0221, 0222.	1095	593113	Gasket Set-Valve	1453	591807	SeaL-Air Cleaner Cover
			1119	799845	Screw (Alternator)	1469A	22097GS	Washer (Air Cleaner Bracket)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10450-13 Assemblies include all parts shown in frames. 03/13/2014

